

GOLFBOAR™

USER GUIDE



IMPORTANT

- Play and set up on grass and outdoors only.
- Avoid hard surfaces e.g. concrete, gravel or any other surfaces that may damage the product.
- Check the integrity of your golfBOAR™ before use.
- Make sure that nobody and nothing is within the radius of the rope before each shot - the ball travels faster than you or anyone else can duck!
- Must be assembled and used under adult supervision.
- Use of the golfBOAR™ is at your own risk.

Set up and play

1. Open and remove your golfBOAR™ from the box.
(See Diagram 1 below for the different parts)

TIP: You may want to keep the box to store your golfBOAR™.

2. Pull the stake out from the golfBOAR™ frame.
3. Push the swivel head (the plastic portion) of the stake firmly into the frame opening (see Diagram 1) till you hear and feel a 'click'. Check that the swivel head is firmly locked in place and that the frame can freely turn around.

Note: You may need to use some effort to push the swivel head into the frame. It was designed like this so that it doesn't come apart when you play.

4. Unclip the ball and FULLY unwind the string.
5. Push the metal part of the stake directly and firmly into the ground up to the swivel head-metal junction.

Note: Make sure the golfBOAR™ is firmly in the ground before each hit. With multiple shots, the stake may become loose and need to be re-inserted into a fresh piece of dirt!


6. Before you start, check your surroundings and make sure that you have enough space around you according to which length of string you are using:

8 Metre	For the 8m golfBOAR™, you need at least 8 metres of open space in front of the placed stake. NOTE: for short iron play only	<i>(See diagram 2 below)</i>
15 Metre	For the 15m golfBOAR™, you need at least 15 metres of open space in front of the placed stake.	<i>(See diagram 3 below)</i>

7. Ensure the string is not tangled around the frame so that the string is free to move during each shot.
8. For an **8-metre golfBOAR™** stand at least 3 metres back from where you placed the frame. For a **15-metre golfBOAR™** stand at least 5 metres back from where you placed the frame. *(see diagrams 4 and 5)*
9. You are now ready to take your first shot!
10. After each shot, recheck that the stake is firmly placed and repeat steps 6-8.

Packing away and Storing

11. When finished, pull the stake and frame out of the ground by pulling upwards.
12. To store your golfBOAR™, remove the stake from the frame. Holding onto the frame and pushing firmly with your thumb on top of the swivel head, pull the stake away using the other hand.

 **WARNING:** Pull the stake away from your body! It is sharp!

***TOP TIP:** You may need to use some effort to uncouple the swivel head and frame. Dust and dirt can make the rubber ring difficult to free so a little wipe down may do the trick.*

13. Wind the string around the frame and secure the ball back into the ball clip.
14. Safely store your device in a dry place for next time.
15. As with all sporting equipment, things can wear with use and over time. We want you to keep having fun with your golfBOAR™, so when it is time, simply purchase a service from our website and we will make your golfBOAR™ look and feel as good as new.

Have fun and if you have any questions at all please connect with us at info@golfboar.com. We'd love to hear from you!

 **Facebook:** <https://www.facebook.com/GolfBOAR>  **Instagram:** @golf.boar

GOLFBOAR™

USER GUIDE DIAGRAMS

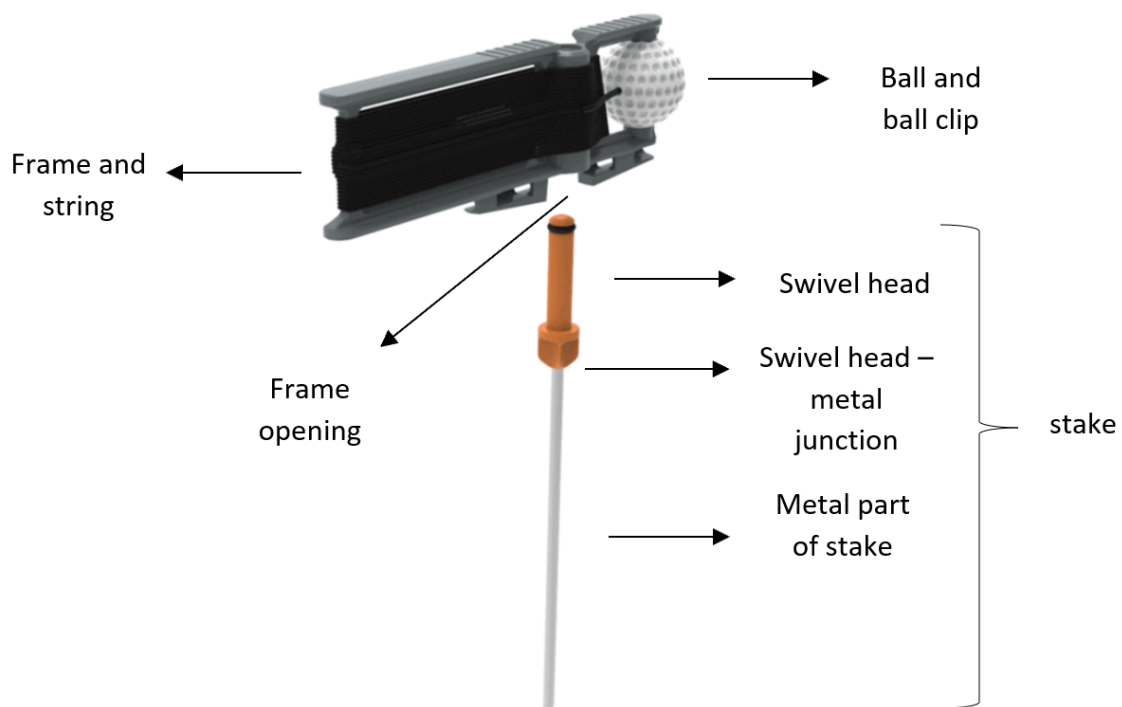 


DIAGRAM 1

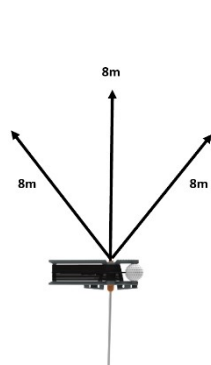 


DIAGRAM 2

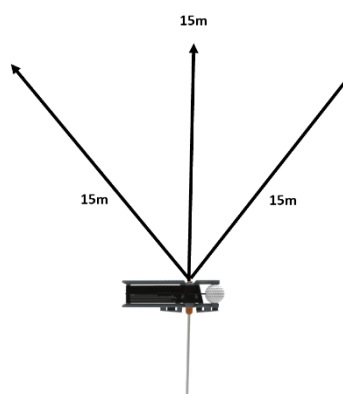 


DIAGRAM 3

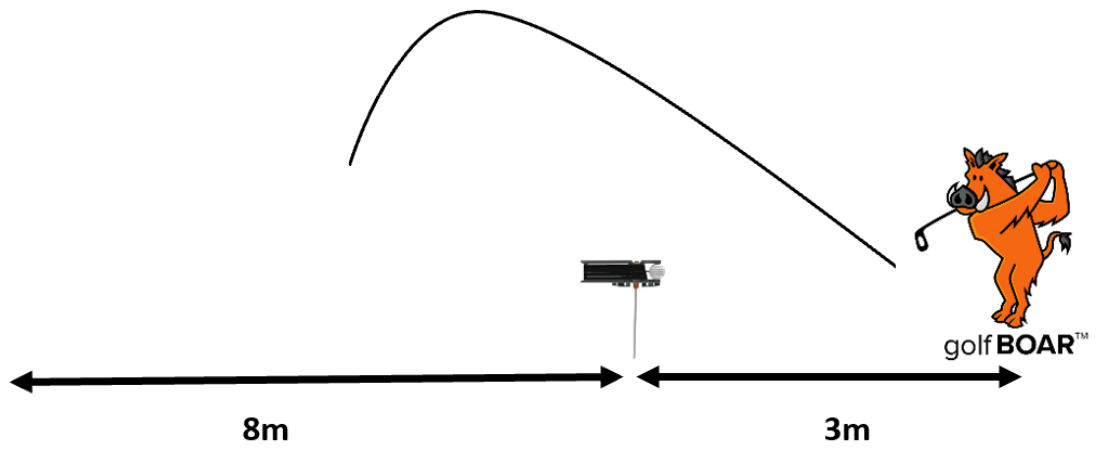 


DIAGRAM 4

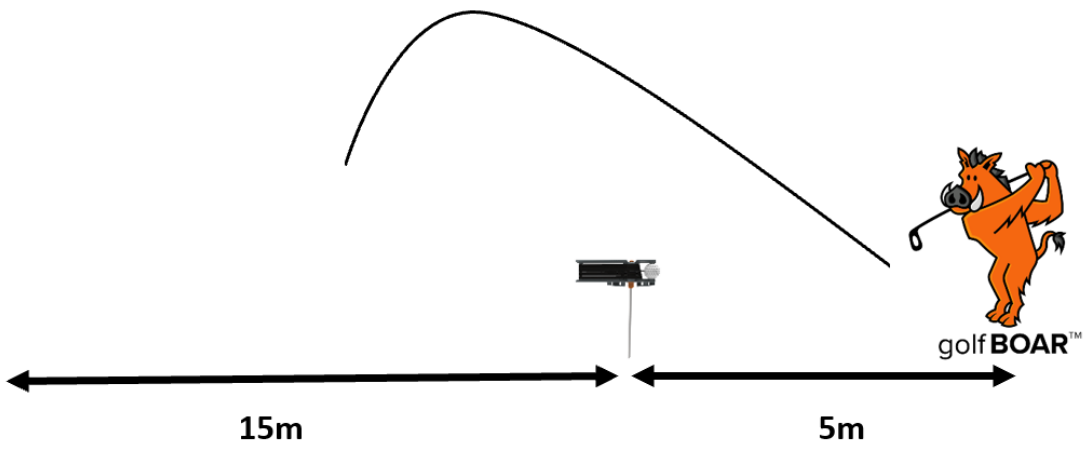 


DIAGRAM 5