

# GOLF BOAR™

## USER GUIDE & SAFETY INSTRUCTIONS

**PLEASE READ THESE INSTRUCTIONS BEFORE USING YOUR GOLF BOAR™ AND KEEP THEM FOR FUTURE REFERENCE.**

### IMPORTANT SAFETY INFORMATION

The Golf BOAR™ is a tethered golfing device designed for outdoor recreational use.

As with golf and other sporting activities involving a moving ball and golf club, there are inherent risks. The Golf BOAR™ has been designed with strength, durability and safe use in mind. However, **it is not possible to guarantee that the ball or tether can never become detached, or that the ball can never travel back towards the player or another person.**

For your safety:

- **Use outdoors on grass only.** Do not use on concrete, gravel or other hard surfaces that may prevent the stake from being secured properly or may damage the Golf BOAR™.
- **Inspect the Golf BOAR™ before every use.** Check the ball, tether, ball attachment point, frame, swivel connection and stake for wear, fraying, cracking, looseness, deterioration or other damage.
- **Do not use the Golf BOAR™ if any component appears damaged, loose, excessively worn or compromised.**
- Always ensure the stake is pushed firmly into suitable ground and the swivel head is securely connected to the frame before play.
- Keep the playing area clear of other people, animals, windows, vehicles, roads and other objects that could be struck by a golf ball or club.
- Only the person taking the shot should be within the designated playing area.
- Children must use the Golf BOAR™ with active adult supervision.
- Keep the tether clear of your body and limbs and ensure it is free from tangles before every shot.
- Never deliberately aim towards another person, animal, building, vehicle or other object.

- Recheck the stake and Golf BOAR™ after every shot before hitting again.
- Follow the minimum player distance and space requirements for your Golf BOAR™ model shown below.

**WARNING:** A golf ball travelling at speed can cause serious injury or property damage. A damaged, worn or incorrectly installed Golf BOAR™ may behave unpredictably. Stop using the product immediately if you have any concern about its condition or operation.

---

## SET UP AND PLAY

### 1. Remove your Golf BOAR™

Open the box and carefully remove your Golf BOAR™.

*TIP: Keep the box if you would like to use it for storage.*

### 2. Remove the stake

Pull the stake out from the Golf BOAR™ frame.

Refer to **Diagram 1** for the different components.

### 3. Connect the stake to the frame

Push the plastic **swivel head** of the stake firmly into the frame opening until you hear and feel it click into place.

Check that:

- the swivel head is firmly locked into the frame; and
- the frame can rotate freely around the swivel.

The connection is intentionally firm.

### 4. Unclip the ball

Unclip the ball and **fully unwind the tether**.

Check that the tether is free from knots, tangles, fraying or visible damage.

## 5. Secure the stake

Push the metal section of the stake directly and firmly into suitable grass-covered ground, up to the junction between the metal stake and swivel head.

Check that the Golf BOAR™ is firmly secured before continuing.

**IMPORTANT:** The stake can loosen after repeated shots or depending on the condition of the ground. Check it before every shot and reposition it in fresh, firm ground whenever necessary.

## 6. Check your playing area

Before taking a shot, carefully check the entire surrounding area.

For the **8 m Golf BOAR™**, ensure there is at least **8 metres of clear open space throughout the possible ball travel area shown in Diagram 2.**

**The 8 m Golf BOAR™ is suitable for short-iron and pitching play only.**

For the **15 m Golf BOAR™**, ensure there is at least **15 metres of clear open space throughout the possible ball travel area shown in Diagram 3.**

Allow additional clear space around the playing area wherever possible. Remember that a golf ball may travel unexpectedly or beyond the normal tethered path if equipment becomes damaged or detached.

## 7. Check the tether

Make sure the tether is not tangled around the frame, stake, player or surrounding objects and is free to move before every shot.

## 8. Position yourself correctly

For the **8 m Golf BOAR™**, stand at least **5 metres back from the frame.**

Refer to **Diagram 4.**

For the **15 m Golf BOAR™**, stand at least **5 metres back from the frame.**

Refer to **Diagram 5.**

Ensure everyone else remains well clear of the playing area.

## 9. Take your shot

You are ready to play.

Always use the Golf BOAR™ responsibly and remain aware of your surroundings.

## 10. Check again after every shot

Before taking another shot:

- check that the stake remains firmly secured;
- check that the swivel and frame remain securely connected;
- ensure the tether is free from tangles;
- check that the ball, tether and attachment point show no signs of damage; and
- make sure the playing area remains completely clear.

Repeat these checks before every shot.

---

# PACKING AWAY & STORAGE

## 11. Remove the Golf BOAR™ from the ground

When you have finished playing, pull the stake and frame vertically upwards to remove them from the ground.

## 12. Separate the stake and frame

Hold the frame securely. Press firmly on the top of the swivel head with your thumb while pulling the stake away with your other hand.

**⚠ WARNING: THE METAL STAKE IS SHARP. ALWAYS PULL THE STAKE AWAY FROM YOUR BODY AND HANDLE IT WITH CARE.**

*TIP: Dirt and dust around the connection may make the swivel head more difficult to remove. Wiping the connection clean may make separation easier.*

## 13. Wrap and secure the tether

Wind the tether neatly around the frame and secure the ball into the ball clip.

Do not store the tether if it is knotted, tightly twisted or visibly damaged.

## 14. Store safely

Clean away excess dirt and moisture and store your Golf BOAR™ in a **dry place away from direct weather exposure.**

Do not leave the stake installed in the ground when the Golf BOAR™ is unattended.

Keep the Golf BOAR™, particularly the sharp stake and long tether, safely stored away from young children when it is not in use.

---

## CARE & INSPECTION

Like other sporting equipment, your Golf BOAR™ will experience wear with repeated use and over time.

Regularly inspect:

- the golf ball;
- the point where the tether enters the ball;
- the full length of the tether;
- the frame and ball clip;
- the swivel head and connection;
- the metal stake.

Minor cosmetic scuffs on the ball may occur through normal use. If you notice **fraying, cracking, deterioration, significant ball damage, a loose attachment, damaged frame, bent or damaged stake, or anything else that causes concern about the integrity of the Golf BOAR™, stop using it.**

Do not attempt to continue playing with a damaged component.


For current information about replacement components or support, visit **[golfboar.com](http://golfboar.com)** or contact **[info@golfboar.com](mailto:info@golfboar.com)**.

---


## REMEMBER

**CHECK IT. SECURE IT. CLEAR THE AREA. THEN PLAY.**


Enjoy your Golf BOAR™ responsibly and have fun outdoors.

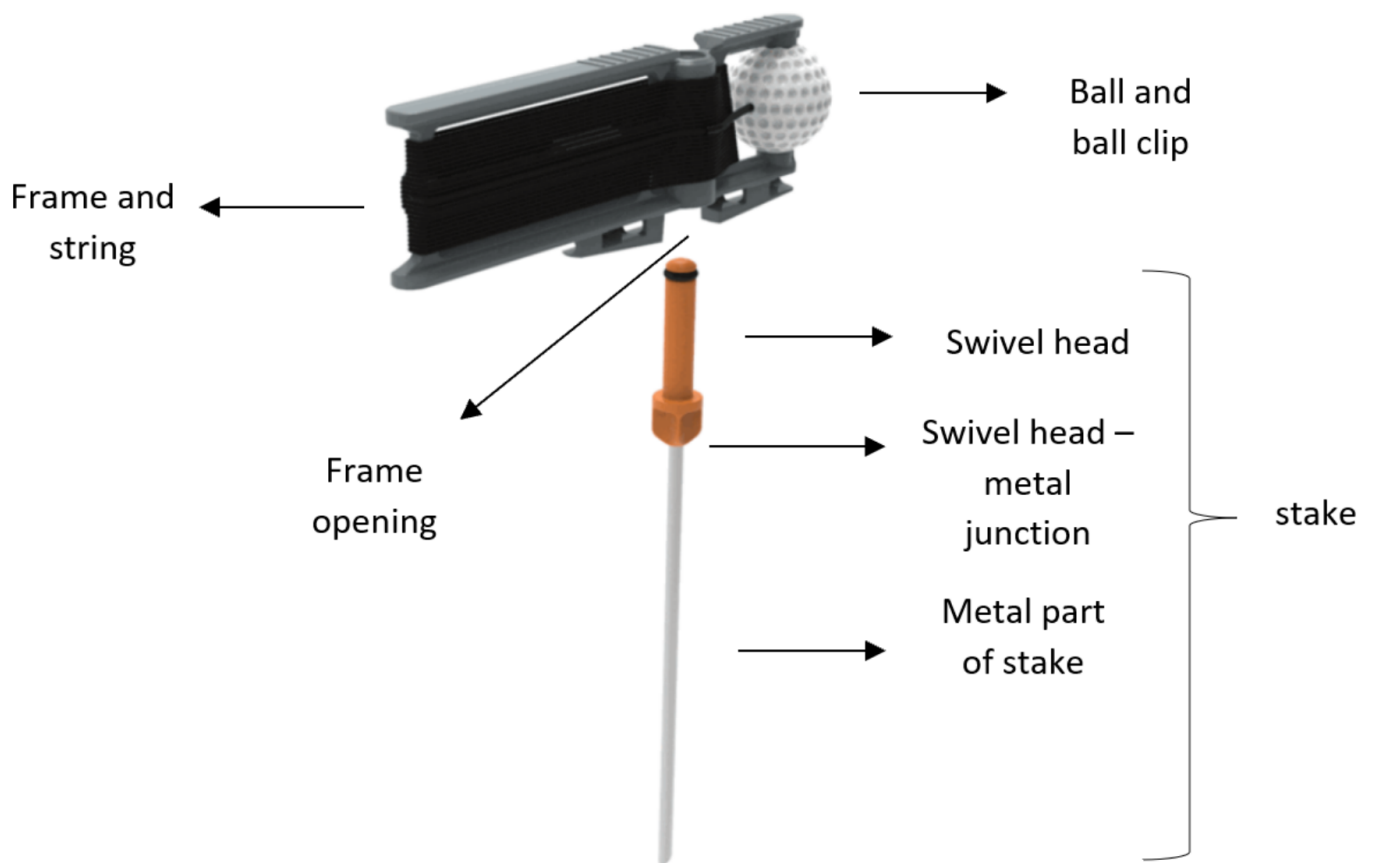

*DIAGRAM 1*

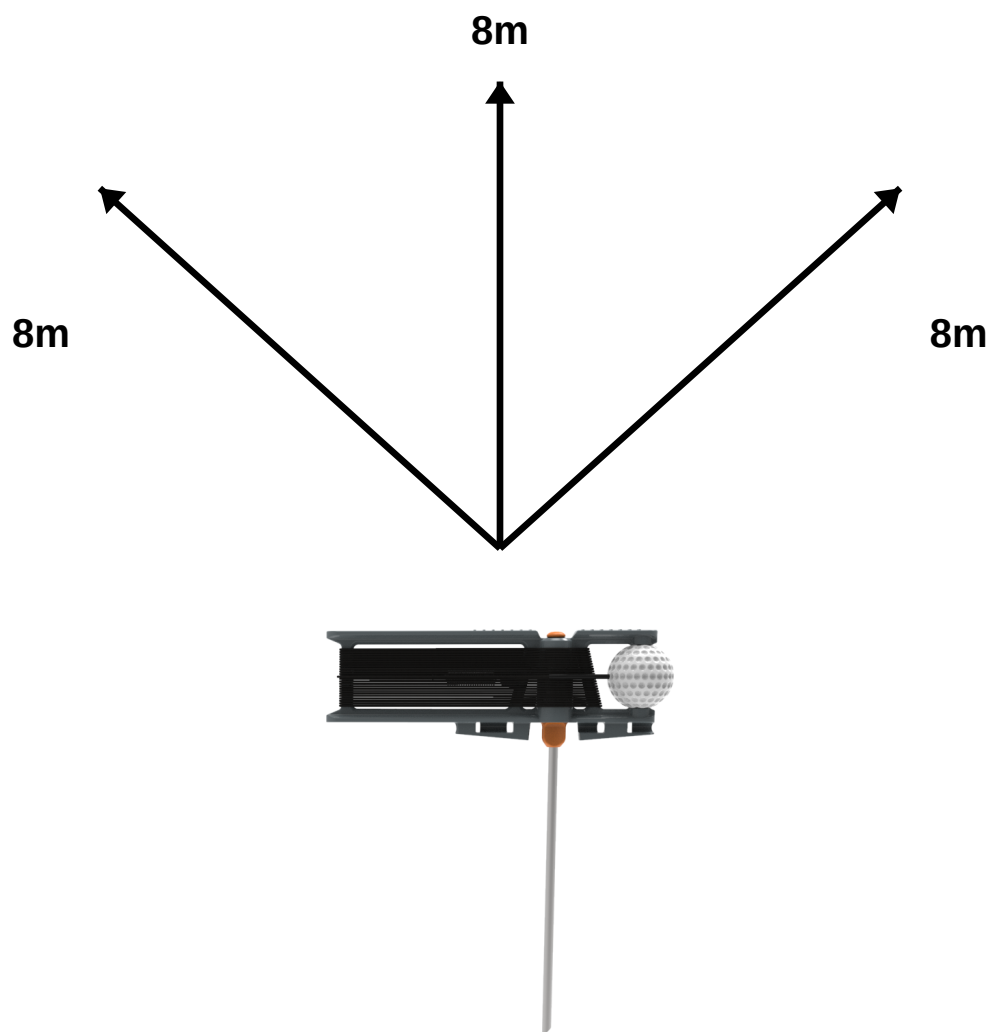

*DIAGRAM 2*

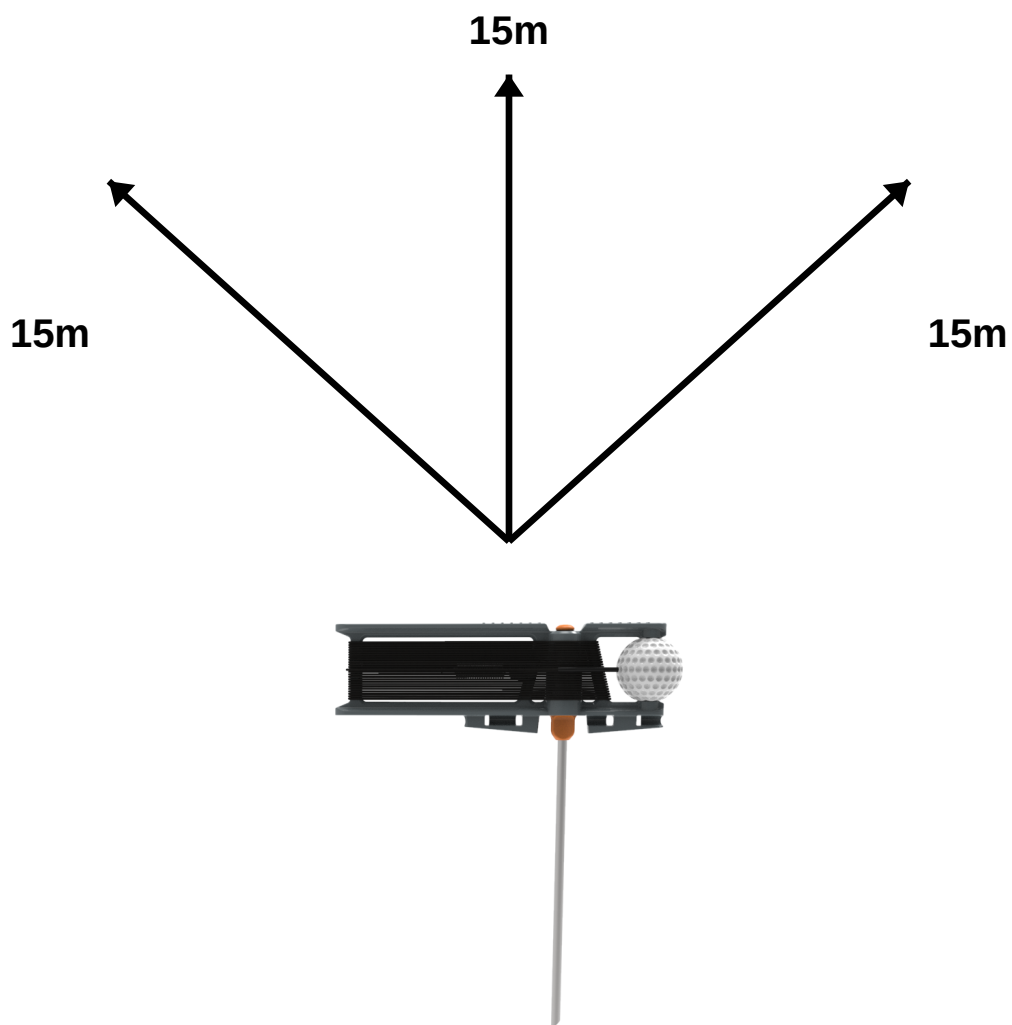

*DIAGRAM 3*


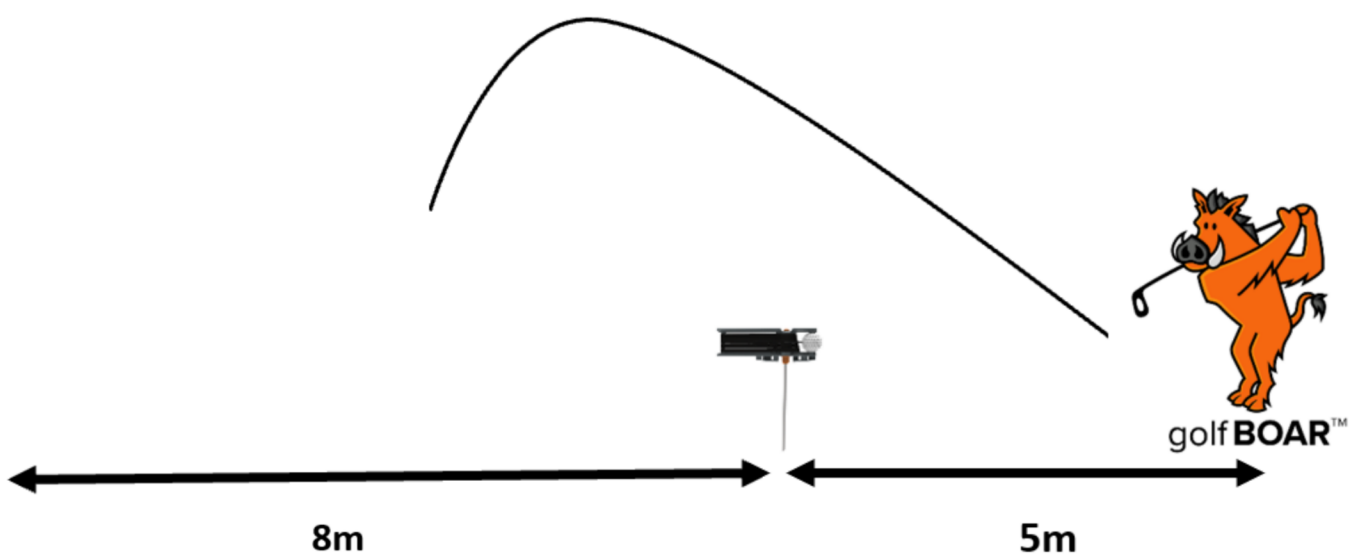 


DIAGRAM 4

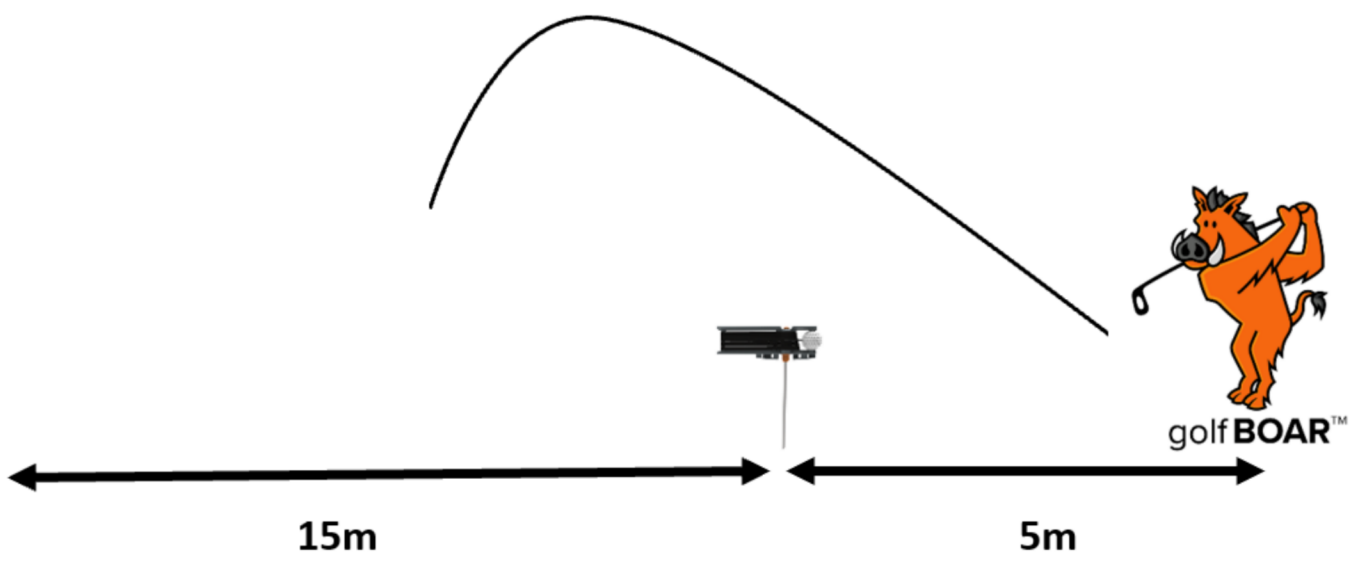 

*DIAGRAM 5*